

GP Antenna Installation

Antenna frequency setting

Choice Frequency:

89.5MHz-94.5Mhz (A+B1)

95.5-100.5Mhz (A+B2)

100.5Mhz-105.5Mhz (A+B3)



Installation steps (See picture1 and picture2)

Place the antenna in an open and high area (see picture 3)





