

# FMTRON ST-15M OPERATION MANUALS

---

## TRANSMITTER:

1. Don't connect power and power must be off
2. Connect your antenna located rear device box
3. Connect audio source located rear device box
4. Connect your 12V DC power adapter located rear device box
5. No need turn on power switch at rear device box if audio source is not from radio/mp3 port
6. Turn on the transmitter power by push button at front panel
7. Adjust desire frequency up/down by push button at front panel



## RADIO/MP3:

- While your transmitter need audio source from fm radio or mp3
- Turn on power switch located rear device box
- Front digital display will show radio previous fm channel by default
- While detecting mp3/SD slot will automatic switch to mp3 digital display and play and audio source will direct input to transmitter if your transmitter was "ON", you may monitor audio by "Audio" port at front panel
- FM radio frequency adjust by REMOTE CONTROL

## OTHER SWITCHES:

PREV: previous song (volume adjust while MODE at AU)

PLAY: play or pause song

NEXT: next song (volume adjust while MODE at AU)


RPT: repeat song

EQ: song effect equalizer

MODE: selecting (radio, mp3, volume control)

## REMOTE CONTROL:

MP3, FM radio receiver frequency adjusts, volume up/down, song control, etc.

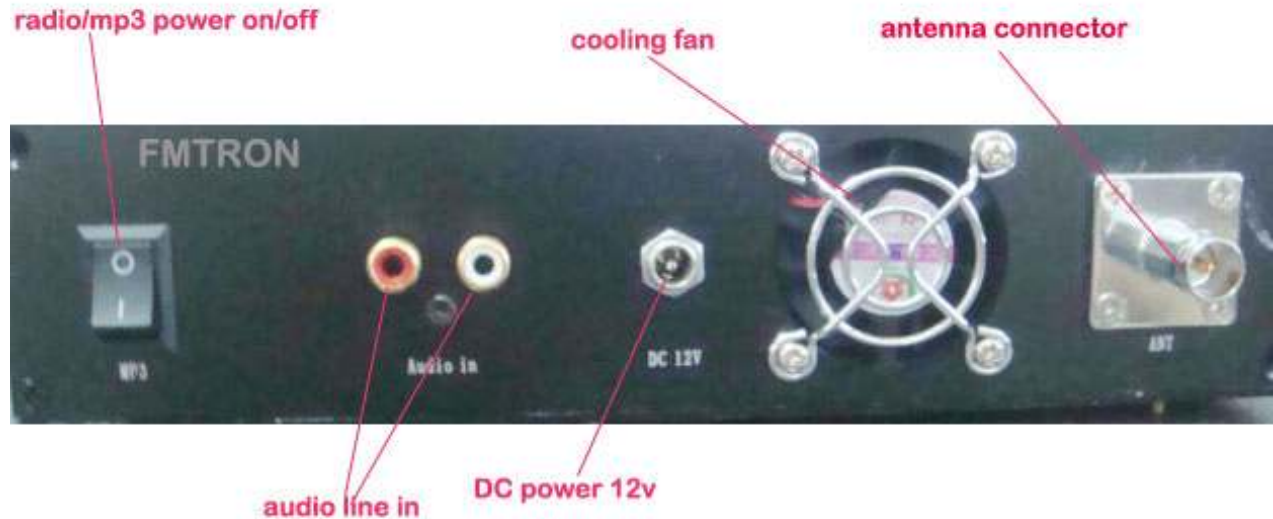

## TROUBLESHOTTINS:

TROUBLES	CAUSING	SLOVEING
Short transmitter distance	Antenna no match or bad connection	Check antenna and connection
	Frequency far from center frequency	Reset transmitter frequency
	Power lower	Check power source
Unstable frequency	Surge power interference	Shut down power 5 seconds and on
Audio distortion or R-L channel un-balance	Bad audio source or input level too high	Check audio source or re-adjust input audio level
Radio no signal or poor	Poor radio antenna	Get better radio antenna
Radio hums	Unstable power source	Turn off and turn on